

iPhone 5S Disassemble Tutorial



Repair Tools BEST-8800D


SKU: ESTOL10031360



01 Power off the iPhone 5S and remove the SIM card tray



02 Remove the iPhone 5S back plate
Use a Pentalobe screwdriver to undo 2 screws at the bottom of the phone.

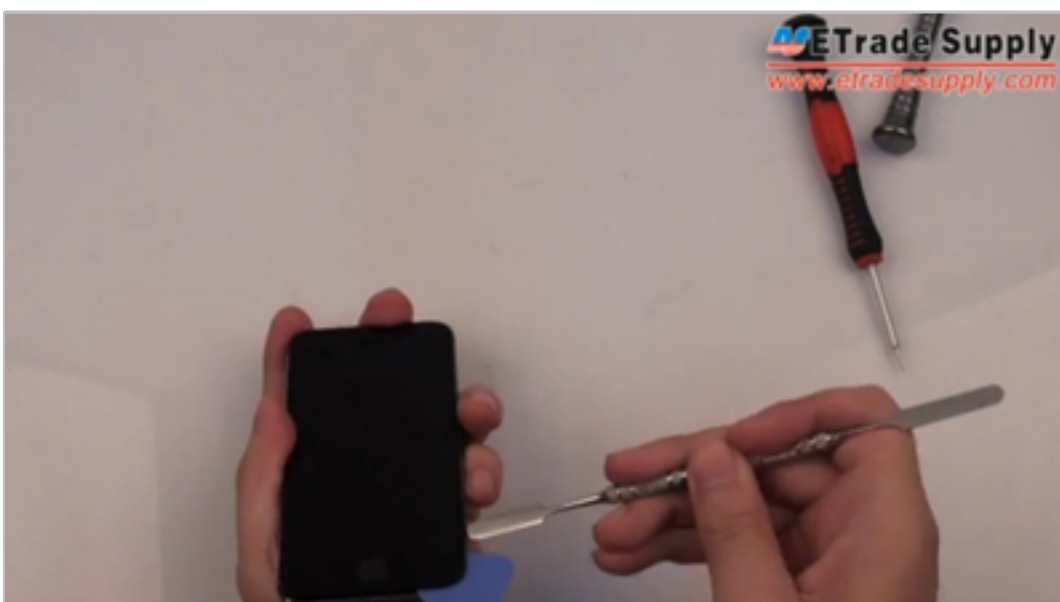

03 Use Metal Spudger Opening Tool to pry up the LCD screen assembly.



04 Pry up the retaining bracket and home button connector



05 Undo 4 Phillips screws to remove the bracket



06 Disconnect 4 connectors to remove the LCD screen assembly. After lifting up the flex cable ribbon connectors of the FaceTime Camera, digitizer touch screen, power flex and LCD screen, the display assembly is free.

iPhone 5S Disassemble Tutorial



12 Undo 7 screws to remove the motherboard



13 iPhone 5S Tear Down Parts

iPhone 5S Disassemble Tutorial



07 Disconnect a connector to remove the 5S rear facing camera



08 Undo 2 screws to remove the retaining bracket.



09-1 Disconnect 2 connectors




09-2 then pry up the battery.
The battery is stuck firmly on the rear housing by the glue. Use the cellphone spudger tool to carefully pry the battery.



10-1 Undo 7 screws,



10-2 then pry up the loud speaker

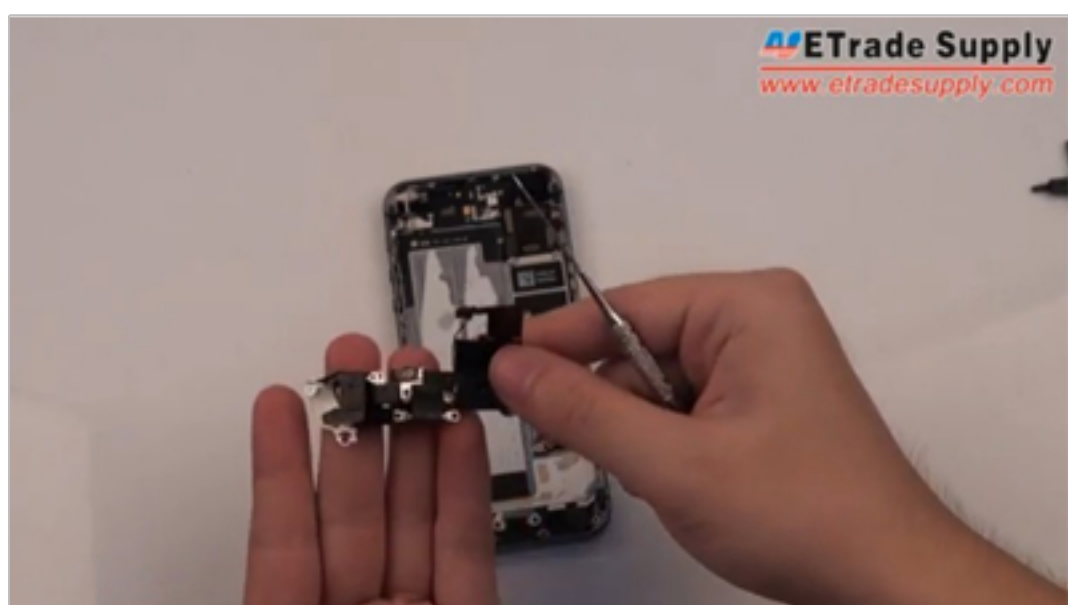

10-3 the loud speaker is free now



11 Remove the charging port flex cable