

REPAIR DIRECTIONS



How to Disassemble HTC One X (AT&T version)

SKU: ESAPP10010154-42



01 Take out the SIM Card Tray.



02 Insert a case opening tool to the gap between the screen and battery door.



03 Remove the LCD Screen and Digitizer Assembly with a suction cup.



04 Undo 5 screws in the top cover.



05 Remove the Top Cover.



06 Undo 2 screws in the bottom.



07 Disconnect the LCD Screen and Digitizer Assembly Flex Cable connector.



08 Disconnect the side key flex cable connector.



09 Disconnect the power button flex cable connector.



10 Disconnect the flex cable connector on the motherboard.



11 Disconnect 2 flex cable connectors on the back of the motherboard.



12 Disconnect the antenna on the motherboard, then remove the antenna.



13 Lift up the motherboard with battery gently.



14 Disconnect the connector, then remove the battery from the motherboard.

