

## Nexus 4 Take Apart Tutorial



OEM LG Nexus 4 E960 LCD Screen and Digitizer Assembly with Front Housing SKU: ESTOL10031120



**01** 1. Take out the SIM card tray (1)



**02** 1. Take out the SIM card tray(2)



**03** 2. Use Torx 5 screwdriver to undo 2 screws at the bottom of the phone.(1)



**04** 2. Use Torx 5 screwdriver to undo 2 screws at the bottom of the phone.(2)



**05** 3. Use a case open tool to separate the case from the main part. (1)



**06** 3. Use a case open tool to separate the case from the main part. (2)





**07** 4. Use Small Phillips screwdriver to remove 13 screws on the rear housing.



**08** 5. Use case open tool to remove the rear housing




**09** 6. Use a Pair of Tweezers to pry out the vibrating motor and ear phone



**10** 7. Carefully pry out the loud speaker module



**11** 8. Disconnect all connectors on the motherboard

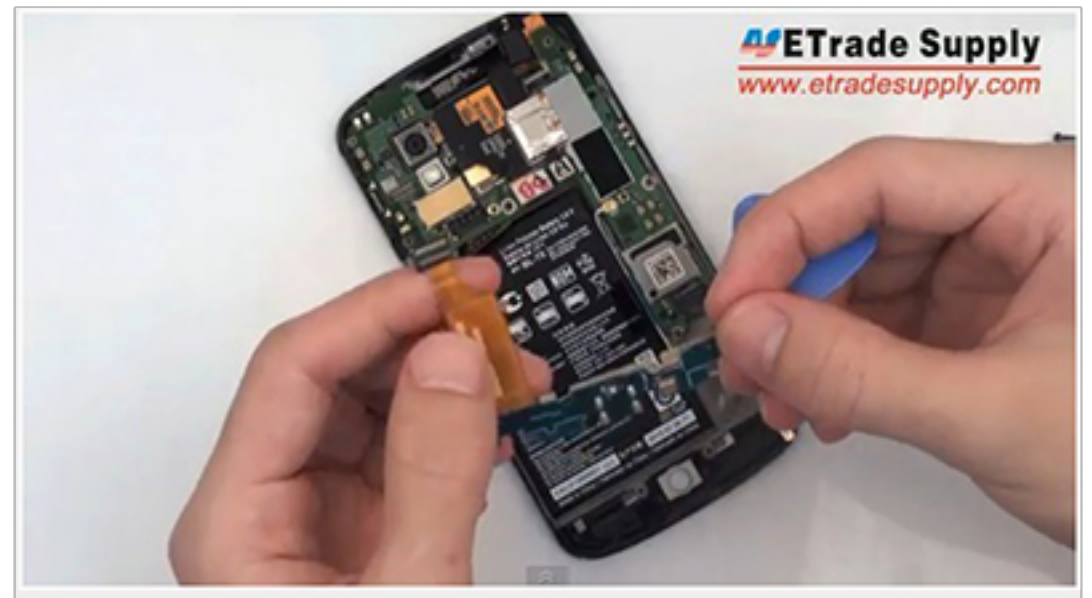

**12** 8. Take out the charging port flex cable models ( 2 )



**13** 9. Remove the motherboard



**14** 10. Remove the front facing camera and rear facing camera





**15** 11. Pick out the head phone jack flex cable



**16** 12. Take out the antenna and side keys



**17** 13. Remove Battery  
Please note: The battery is adhered to the front housing by strong adhesive. Prying up the battery with too much strength could break



**18** 14. Tear down Nexus 4 parts