

## iPhone 6 Disassemble Tutorial



Repair Tools BST-8921 (38 pcs/set)

SKU: ESTOL140506101137



**01** Power off the Apple iPhone 6.



**02** Undo the 2 charging port screws. (Notice: there're lots of different screws inside, mark when disassembling in case of confusion.)



**03-1** Use the suction cup tool and case opening tool to separate the LCD assembly from rear housing assembly.



**03-2** Notice: be careful not to break the flex ribbons.



**04-1** Undo the 5 screws that locking the metal cover



**04-2** above LCD and Digitizer flex ribbon connectors.



# iPhone 6 Disassemble Tutorial



**05** The iPhone 6 LCD assembly and rear housing assembly are separated.



**06** Undo the 3 screws of home button bracket.



**07** Pry up the home button flex ribbon connector, gently poke the home button and take it out.



**08-1** Undo the 2 screws that locking the metal cover



**08-2** above ear speaker and front facing camera.



**09** Remove the front facing camera and the ear speaker.



**10** Undo the 6 screws that locking LCD frame and LCD back plate.



**11** Use tweezers to pick up the flex cable and remove the LCD back plate.




# iPhone 6 Disassemble Tutorial



**12** Separated LCD assembly, metal plate and rear housing assembly.



**13-1** Undo the 2 screws that locking the metal cover .

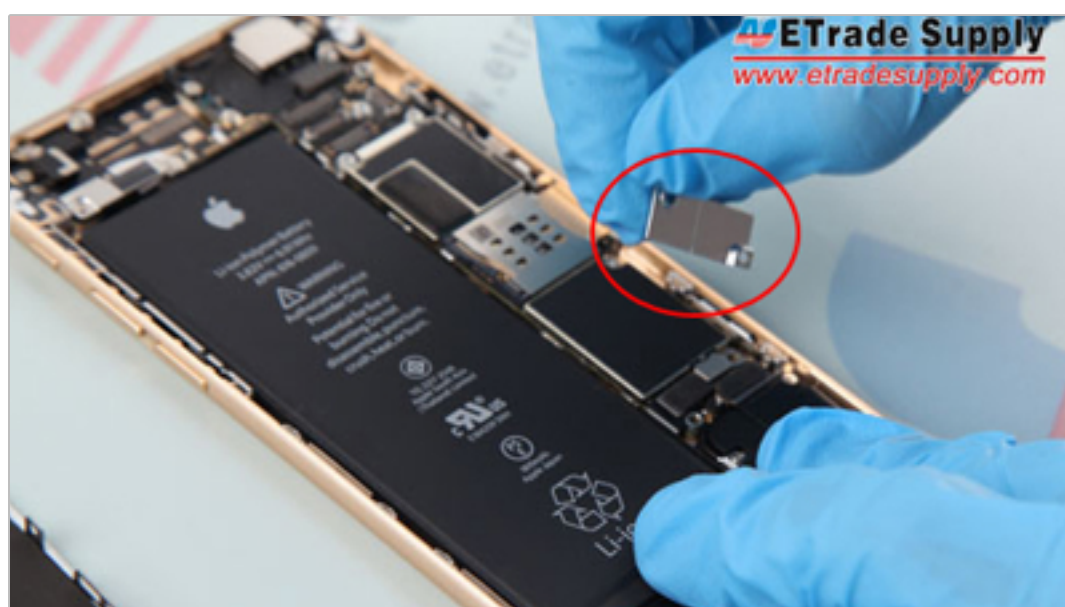


**13-2** Above battery connector and loud speaker connector.



**14-1** Pry up the connectors.



**14-2** Pry up the connectors.

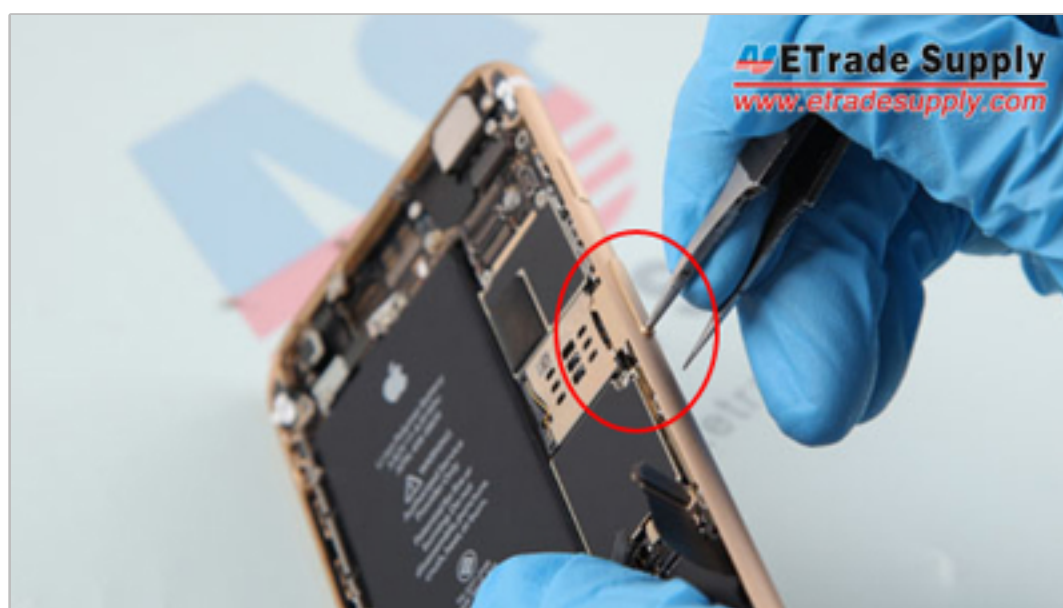

**15-1** Use an eject pin or the tweezers to poke.



**15-2** And take out the SIM card tray.



**16** Undo the 2 screws that locking the metal cover above power button flex connector and volume button flex connector.




# iPhone 6 Disassemble Tutorial



**17** Undo the 10 screws that locking the motherboard. (Notice: there're 2 screws under the black small part.)



**18** Pry up the power button flex connector and volume button flex connector.

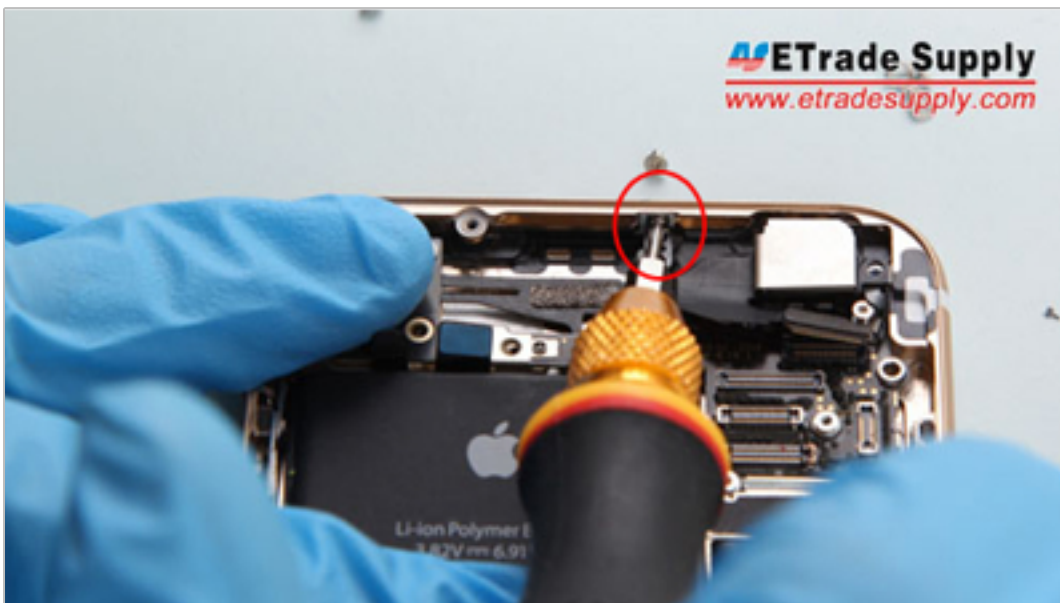

**19** Undo the screw on the top of iPhone 6.



**20** Remove the motherboard.



**21-1** Undo the 2 screws that locking the metal cover above the rear facing camera.



**21-2** Then remove the camera.



**22-1** Undo the 3 screws .




**22-2** And take out the loud speaker.



# iPhone 6 Disassemble Tutorial



**23** Undo the 3 screws that locking the earphone jack.

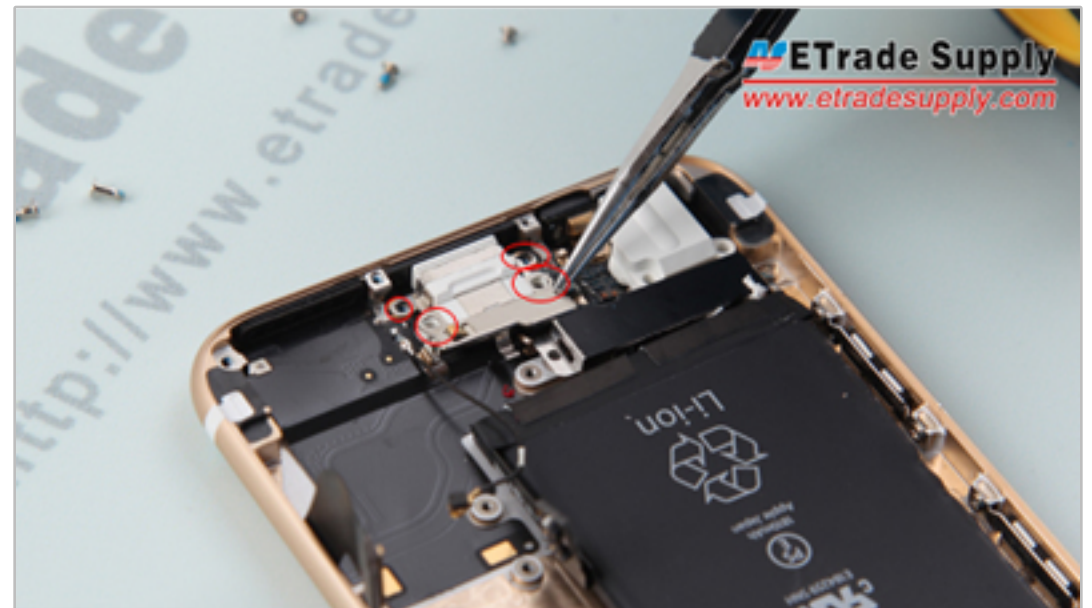

**24** Undo the 4 screws that locking the charging port.



**25-1** Undo the 2 screws.



**25-2** And remove the vibrating motor.



**26** The iPhone 6 disassembly had been finished.